


# Droid Car Dock Camera Hole Template

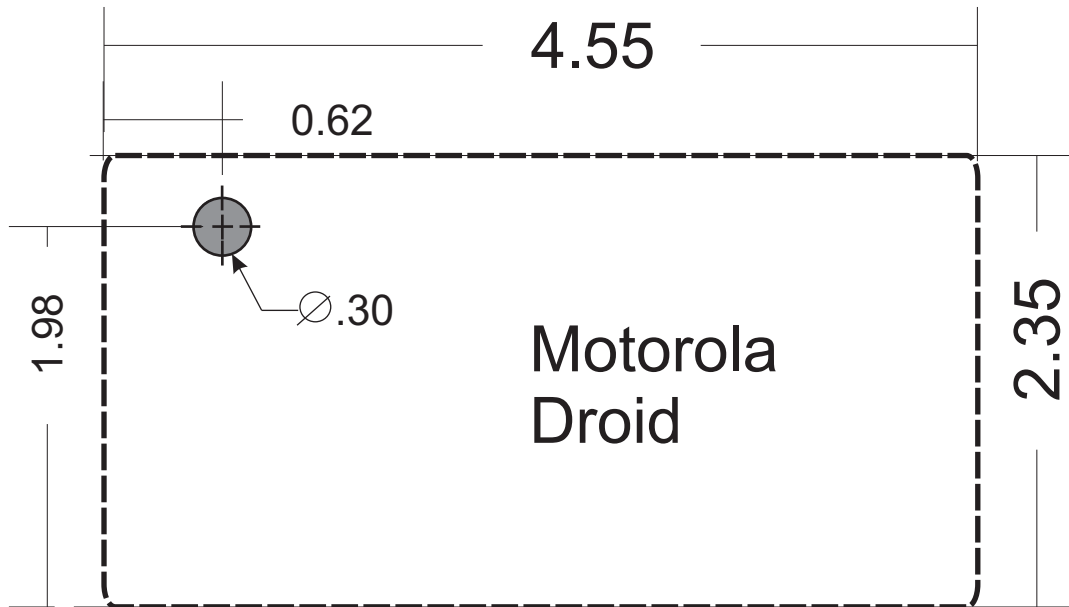

1. Cut out template on dotted line.
2. Place in dock, fasten with tape.
3. Drill template hole with a 5/16" drill bit.

(Dimensions provided for verification)